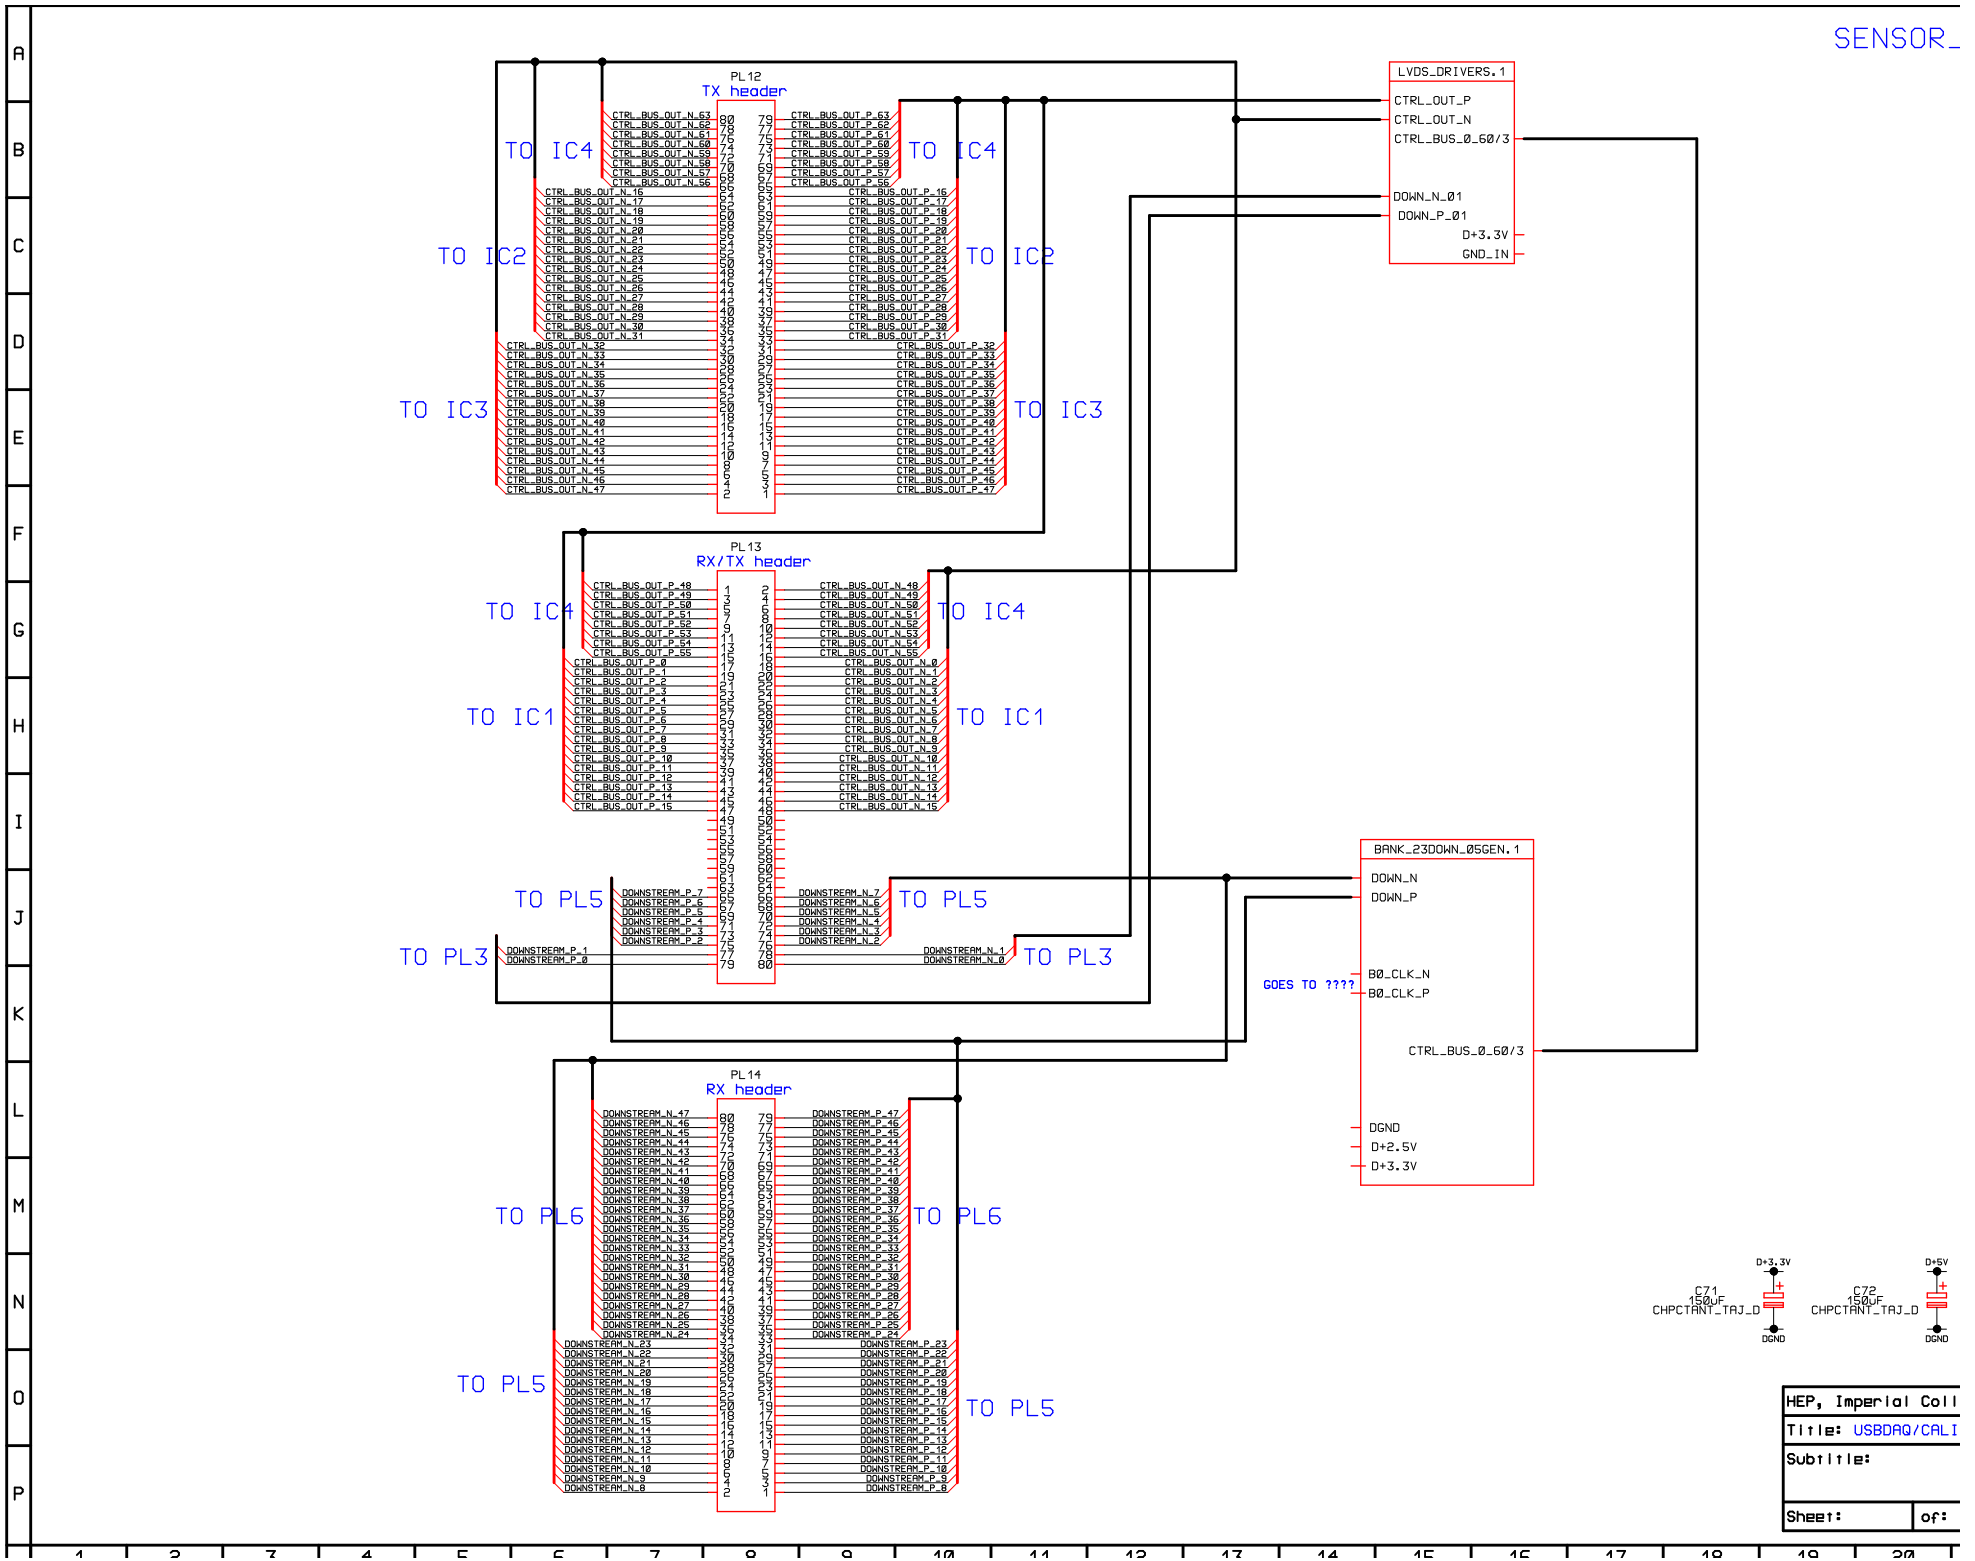
SENSOR_
PL12
TX header
TO IC4
TO IC2
TO IC3
PL13
RX/TX header
TO PL5
TO PL3
PL14
RX header
TO PL6
LVDS_DRIVERS.1
CTRL_OUT_P
CTRL_OUT_N
CTRL_BUS_0_60/3
DOWN_N_01
DOWN_P_01
D+3.3V
GND_IN
BANK_23DOWN_05GEN.1
DOWN_N
DOWN_P
B0_CLK_N
B0_CLK_P
GOES TO ????
CTRL_BUS_0_60/3
DGND
D+2.5V
D+3.3V
C71
150UF
CHPCTANT_TAJ_D
C72
150UF
CHPCTANT_TAJ_D
HEP, Imperial Coll
Title: USBDAQ/CALI
Subtitle:
Sheet:
of: